


# Thermapen® IR Blue

## Care and Use Card

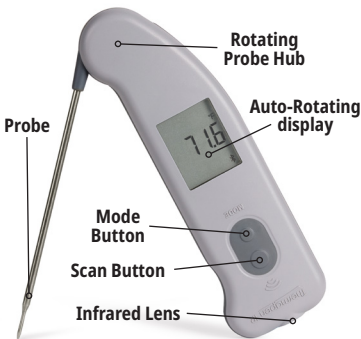

- Measurements can be made with either the penetration probe or infrared.
- Unfold the probe to use penetration probe.
- Close probe and press Scan button to use infrared.
- When connected, the Bluetooth symbol will show in the display.
- Clean probe with probe wipe after each use.
- Clean instrument body with damp soapy cloth being careful not to allow water into infrared lens. (Don't use a wipe containing IPA on instrument housing).
- Keep infrared lens dry and free from oils, dirt, and grime. Clean very carefully with cotton swab dipped in isopropyl alcohol and allow to fully dry before reuse.
- Keep housing away from water. It is not waterproof.
- Don't pry, jab, or force probe tip into food.
- Don't puncture containers or lift food with probe.
- Don't rotate probe past 180 degrees.
- Don't immerse probe into food up to hub or allow food to collect on/around probe hub.
- Don't drop or rest on surfaces above 122°F (50°C).
- Don't overtighten battery screw.

---

For questions, call ThermoWorks  
Tech Support at 385-330-0591



**Optional Silicone Boot**  
available at [www.thermoworks.com](http://www.thermoworks.com)



**Optional Wall Bracket**  
available at [www.thermoworks.com](http://www.thermoworks.com)



**ThermoWorks**

[www.thermoworks.com](http://www.thermoworks.com)

741 E. Utah Valley Dr. • American Fork, UT 84003