


I.R.F.S.

Infrared Food Safety Thermometer – Operating Instructions

The thermometer is a non-contact infrared thermometer, and always with Real-Time Maximum (MAX) data. Please remember to keep away from children and don't use it for safety related applications.

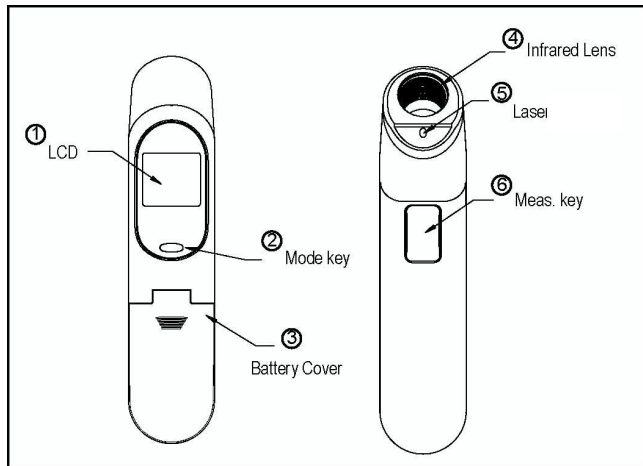

(Default Screen)



- Simply aim the thermometer at the measure target with Lens (4) and press Meas. key (6) to display the surface temperature.
- During the measurement, the MAX reading will be displayed beside the MAX icon.
- The Distance:Spot is 12:1. Please make sure the target area is within the field of view.

ADD VALUE:

°C or °F	Press Mode key (2) for °C or °F switching.
	LCD Backlight: always on.
	Class II Laser: always enabled.

⚠ EMC/RFI

Readings may be affected if the unit is operated within radio frequency electromagnetic field strength of approximately 3 volts per meter, but the performance of the instrument will not be permanently affected.

* Note: Under the electromagnetic field of 3V/m from 350 to 550MHZ, the maximum error is 8°C (14.4°F).



American Fork, UT 84003 • 801-756-7705
www.thermoworks.com



⚠ CAUTION

- WHEN DEVICE IS IN USE, DO NOT LOOK DIRECTLY INTO THE LASER BEAM—PERMANENT EYE DAMAGE MAY RESULT.
- USE EXTREME CAUTION WHEN OPERATING THE LASER.
- NEVER POINT THE DEVICE TOWARDS ANYONE'S EYES.
- KEEP OUT OF REACH OF ALL CHILDREN.

STORAGE & CLEANING

The sensor lens is the most delicate part of the thermometer. The lens should be kept clean at all times, care should be taken when cleaning the lens using only a soft cloth or cotton swab with water or medical alcohol. Allowing the lens to fully dry before using the thermometer. Do not submerge any part of the thermometer. The thermometer should be stored at room temperature between -20 to +65°C (-4~149°F).

LCD ERROR MESSAGES

The thermometer incorporates visual diagnostic messages as follows:



'Er2' is displayed when the thermometer is exposed to rapid changes in the ambient temperature.



'Er3' is displayed when the ambient temperature exceeds 0°C (32°F) or +50°C (122°F).

The thermometer should be allowed plenty of time (minimum 30 minutes) to stabilize to the working/room temperature.



For all other error messages it is necessary to reset the thermometer. To reset it, turn the instrument off, remove the battery and wait for a minimum of one minute, reinsert the battery and turn on. If the error message remains please contact the Service Department for further assistance.

BATTERIES


The thermometer incorporates visual low battery indication as follows:



'Battery OK': measurements are possible



'Battery Low': battery needs to be replaced, measurements are still possible



'Battery Exhausted': measurements are not possible

⚠ When the 'Low Battery' icon indicates the battery is low, the battery should be replaced immediately with AAA, 1.5V batteries. Please note: It is important to turn the instrument off before replacing the battery otherwise the thermometer may malfunction. ⚠ Dispose of used battery promptly and keep away from children.

SPECIFICATION

Measurement Range	-67 to 536°F (-55 to 280°C)
Operating Range	32 to 122°F (0 to 50°C)
Accuracy, Tobj=0 to 65°C, Tamb=23±2°C	0 to 65°C= ±1°C (1.8°F)
Accuracy Tamb=23±2°C	<0°C=±1°C (±2°F) ±0.1 degree/degree >149°F (65°C)=1.5% of reading
Emissivity	0.97 Fixed
Resolution (-9.9 to 199.9°C)	0.1°C/°F
Response Time (90%)	1sec
Distance:Spot	12:1
Battery Life	Typ. 180, min 140 hours continuous use
Dimensions	175.2 x 39.0 x 71.9 mm
Weight	179 grams including batteries (AAA*2pcs)

** The thermometer will automatically shut off if left idle for more than 15sec.

Made in Taiwan



ThermoWorks

CERTIFICATE OF CONFORMANCE

The manufacturer of this instrument has implemented a quality assurance system under ISO 9001:2000 certified quality system and fully follow ISO GUM (Guide to the Expression of Uncertainty in Measurement) to evaluate the uncertainty of temperature and resistance standards, guarantee performance as below;

Calibration Temperature	Max Error	Target Accuracy	Target Stability
-30°C	±1.0°C	±0.3°C	0.3°C
0°C	±1.0°C	±0.4°C	0.1°C
100°C	±1.5°C	±0.4°C	0.1°C
200°C	±3.0°C	±0.5°C	0.1°C

Note: Assume the operation ambient temperature under $23 \pm 3^{\circ}\text{C}$

Furthermore, we certify that this infrared thermometer has been inspected and found to comply with published specifications. This device has been calibrated by temperature and/or resistance standards that are traceable to NIST (U.S. National Institute of Standards and Technology) or NML National Measurement Laboratory) of Taiwan, and the calibration procedure corresponds with generally accepted regulations and standards.

ThermoWorks, Inc.
741 E. Utah Valley Dr.
American Fork, UT 84003
www.thermoworks.com